

## Accessories

4

## Fifth Jaw Kit



## 1MP, 1MM and 3MM Modular Metering Stacks

Description	Application	Catalog Number
Fifth Jaw Kit	Bolted onto neutral in the 3, 6 or 9 o'clock position. Typically used on network metering systems (three-phase in/single-phase out) or when specified by utility company.	1MM5JK
	Isolated fifth jaw kit	1MM5JKOP
Manual Bypass Kit	For use with 125A sockets only. (Not top socket.)	1MMBPM125
	For use with 200A sockets only. (Not top socket.)	1MMBPM200
	This kit only to be used for top position of two- and three-high 125A 1MM and 3MM stacks and of 2, 5 and six-position 125A 1MP packs.	1MMBPM125T
	This kit only to be used for top position of 200A two-position 1MP packs.	1MMBPM200T
Horn Bypass Kit	Horn bypass	1MMBPH
	<b>Note:</b> For 1MP2122RRL use:	WCG8HB ①
Lexan Blank Cover	Meter bypass jumper	1MMBPJ
	Installed on 125A or 200A sockets. Jumpers are plugged into jaws. Order Lexan® cover plate with bypass jumpers to prevent access to meter socket once energized. (Not UL listed.)	
	Lexan blank cover	1MMPCP
Wall Mounting Rail	Circular cover mounted on ring or ringless devices preventing access to meter socket while meter is not in place. Includes four plastic tabs that plug into each jaw.	1MMACP
	Same as 1MMPCP minus the tabs located in the back to plug into jaws. This device to be used while meter bypass jumpers are in place (1MMBPJ).	
	Blank meter socket cover	1MMBC125B
Bussed Spacer	Used for 125A stacks. Fits bottom socket only. Kit replaces existing meter cover preventing access to meter socket. Includes hasp for seal.	1MMBC200B
	Used for 200A stacks. Fits bottom socket only. Kit replaces existing meter cover preventing access to meter socket. Includes hasp for seal.	
Wall mounting rail	Rails are 4 feet (1.2m) in length. Bolted on wall for stacks, packs and mains to be hung.	1MMWB
Bussed spacer	Bussed spacer 1200A 4-inch (101.6 mm). Required when stacks are mounted on right-hand side in EUSERC areas. (copper)	3MMBSK ②
Bus duct riser/meter center connection	Available in 400, 600, 800A main fusible units only. Contact product line for details.	—

## Notes

① WCG8HB only applies to meter packs built prior to 1998. Current meter packs use 1MMBPH.

② Must be used when mounting MCB main next to an MTB main or another MCB main device.