

Ultimate[®] Load Centers

electriCenter Accessories

Description	Catalog Number	Std. Pkg.	Shp.Wt. (lbs/std)
Surface Mount Spacer Kit (1/4")	ECSMK1	10	.10
Filler Plates			
– for branch breakers and 150-225A Ultimate Main Breaker opening (2 required for 150-225A main breaker opening)	ECQF3	100	.25
– for 100 and 125A main breaker opening	ECMBF125	25	.25
Load Center Trim Screw (order quantity of 1 equals bag with 6 screws) Reference hole in enclosure	ECTS2	100	6
Insulated Isolated Ground Bars			
– 5 positions	ECINSGB5	20	1
– 14 positions	ECINSGB14	20	3
– 20 positions	ECINSGB20	20	4
Circuit Directory Card (42 circuit) self-adhesive	ECCP1	100	1
Neutral Lug Kits			
– Wire Range #2 - 1/0 AWG Cu/Al	ECLK1-2	50	
– Wire Range #4 - 2/0 AWG Cu/Al	ECLK2	50	2
– Wire Range #1 - 300 MCM Cu/Al	ECLK3	10	2
– with Bond Screw (Ultimate Load Centers)	ECLKB1	10	.10
Collar Straps			
– Wire Range #14-1/0 AWG Cu/Al, for use with ground bar only	ECCS1	50	2
– Wire Range #6 WG-250 kcmil Cu/Al, for use with ground bar only	ECCS2	50	2
Ground Bar Kits			
– 5 position, Cu/Al Wire Range – #4-14	ECGB5	20	2
– 10 position, Cu/Al Wire Range – #4-14	ECGB10	20	2
– 14 position, Cu/Al Wire Range – #4-14	ECGB14	20	2
– 20 position, Cu/Al Wire Range – #4-14	ECGB20	20	2
– 10 position, Cu/Al Wire Range – #4-14, plus 1 position #14-1/0 Cu/Al	ECGB101	20	4
– 14 position, Cu/Al Wire Range – #4-14, plus 1 position #14-1/0 Cu/Al	ECGB141	20	4
– 20 position, Cu/Al Wire Range – #4-14, plus 1 position #14-1/0 Cu/Al	ECGB201	20	4
– 14 position, Cu/Al Wire Range – #4-14, plus 1 position #6-2/0 Cu/Al	ECGB142	20	4
– 20 position, Cu/Al Wire Range – #4-14, plus 1 position #6-2/0 Cu/Al	ECGB202	20	4
Lug Kits, 2-pole			
– Wire Range – #3-1 AWG Cu, #1/0 AWG Al, subfeed or feed-thru applications	ECLK2125	1	.25
– Wire Range – #14-2/0 Cu, #8-3/0 Al, subfeed or feed-thru applications	ECLK2150	1	.25
– Wire Range – #1-300 mcm Cu/Al, subfeed or feed-thru applications	ECLK2225	1	.25
Main Breaker Conversion Kits, for the Ultimate Load Center.			
Converts main lug load centers to main breaker load centers:			
– 100 Amp (100 and 125 amp Load Centers)	MBK100A	1	1.10
– 125 Amp (125 amp Load Centers)	MBK125A	1	1.10
– 150 Amp (150, 200 and 225 amp Load Centers)	MBK150A	1	2.19
– 200 Amp (200 and 225 amp Load Centers)	MBK200A	1	2.19
– 225 Amp (225 amp Load Centers)	MBK225A	1	2.19
Main Lug Conversion Kits.			
Converts Ultimate main breaker load centers to main lug load centers:			
– 100 to 125 Amps	ECMLK125	1	.125
– 150 to 225 Amps	ECMLK225	1	.125
Backfed main breaker hold down used with Type QP breakers:			
– Ultimate Load Centers	ECMBR2	25	.02
– EQ Load Centers (60 amps and higher)	ECMBR1	25	.02

Hubs

Conduit Size	Catalog Number	Shp.Wt. (lbs.)/Std.	Std. Pkg.
1-1/4"	ECHS125	14	35
1-1/2"	ECHS150	14	35
2"	ECHS200	14	35
2-1/2"	ECHS250	14	35