
WOOD WALL or MASONRY WALL or TILE ON MASONRY WALL INSTALLATION:

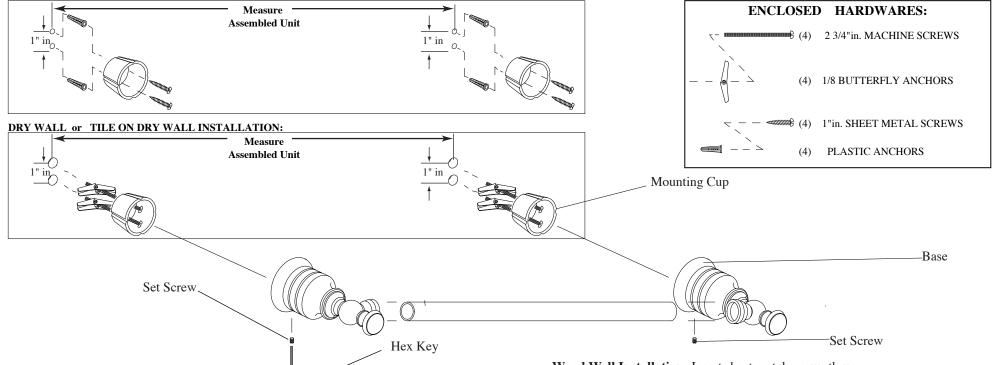

- Hold the product on desired wall location and lightly mark outline of each base. Mark two vertical dots with 1" separation at center of each marked outline. Make sure the two sets of vertical dots are leveled to each other and with following distance: BA100-18"; BA1001-24"; BA1002-30"
- 2. Dry Wall or Tile on Dry Wall Installation: Pre-drill holes using 3/8" drill bit. (Tile on dry wall installation requires 3/8" masonry drill bit).

Wood Wall installation: Pre-drill holes using 1/8" drill bit.

Masonry or Tile on Masonry Wall Installation: Pre-drill holes using 3/16" masonry drill bit.

3. Dry Wall or Tile on Dry Wall Installation: Insert machine screws thru two slotted holes in mounting cup. Thread butterfly anchors into machine screws as shown in diagram. Pinch together the ends of butterfly anchors and push into pre-drilled 3/8" holes until anchors springs open on inside of wall. While pulling mounting cup away from wall, tighten screws with a screw driver. Repeat other Side. **Wood Wall Installation:** Insert sheet metal screws thru two slotted holes in mounting cup. Fasten screws directly into pre-drilled 1/8" holes. Repeat other side.

Masonry or Tile on Masonry Wall Installation: Insert plastic anchors into pre-drilled 3/16" holes. Insert sheet metal screws thru two slotted holes in mounting cup. Fasten screws into plastic anchors. Repeat other side.

4. Mount the product onto mounting cups and tighten set screw at bottom of base with provided hex key. Set screws must check into groove on mounting cup.

Care and Cleaning Instructions:

Using a soft cloth or sponge wash with warm and soapy water. Do not use abrasive cleaners or cleaners containing bleach.

